



CRL-60

Item #	Description
1	Cap Plastic
2	Adjusting Screw
3	Jam Nut 3/8-16
4	Cover
5	Screw
6	Spring Guide
7	Spring
8	Stem Nut
9	Belleville Washer
10	Diaphragm Washer Upper
11	Diaphragm
12	Diaphragm Washer Lower
13	O-Ring
14	Stem Guide
15	O-Ring
16	O-Ring
17	Stem Assembly
18	Seat
19	O-Ring, Seat
20	Body
21	1/8" Pipe Plug
22	Body Pipe Plug

CRL-60 Spring Range PSI	APPROX. INCREASE FOR EACH CLOCKWISE TURN OF ADJUSTING SCREW
0 to 75	8.5 PSI
20 to 105	12.5 PSI
20 to 200	28.0 PSI
100 to 300	18.0 PSI

