



Inside Cla-Val

How Control Valves Work



NON-MODULATING

|

ANTI-CAVITATION

|


MODULATING

|


AUTOMATIC

Main Valves


Most Cla-Val valves consist of a main valve and pilot control system. The basic main valve is called a Hytrol Valve.

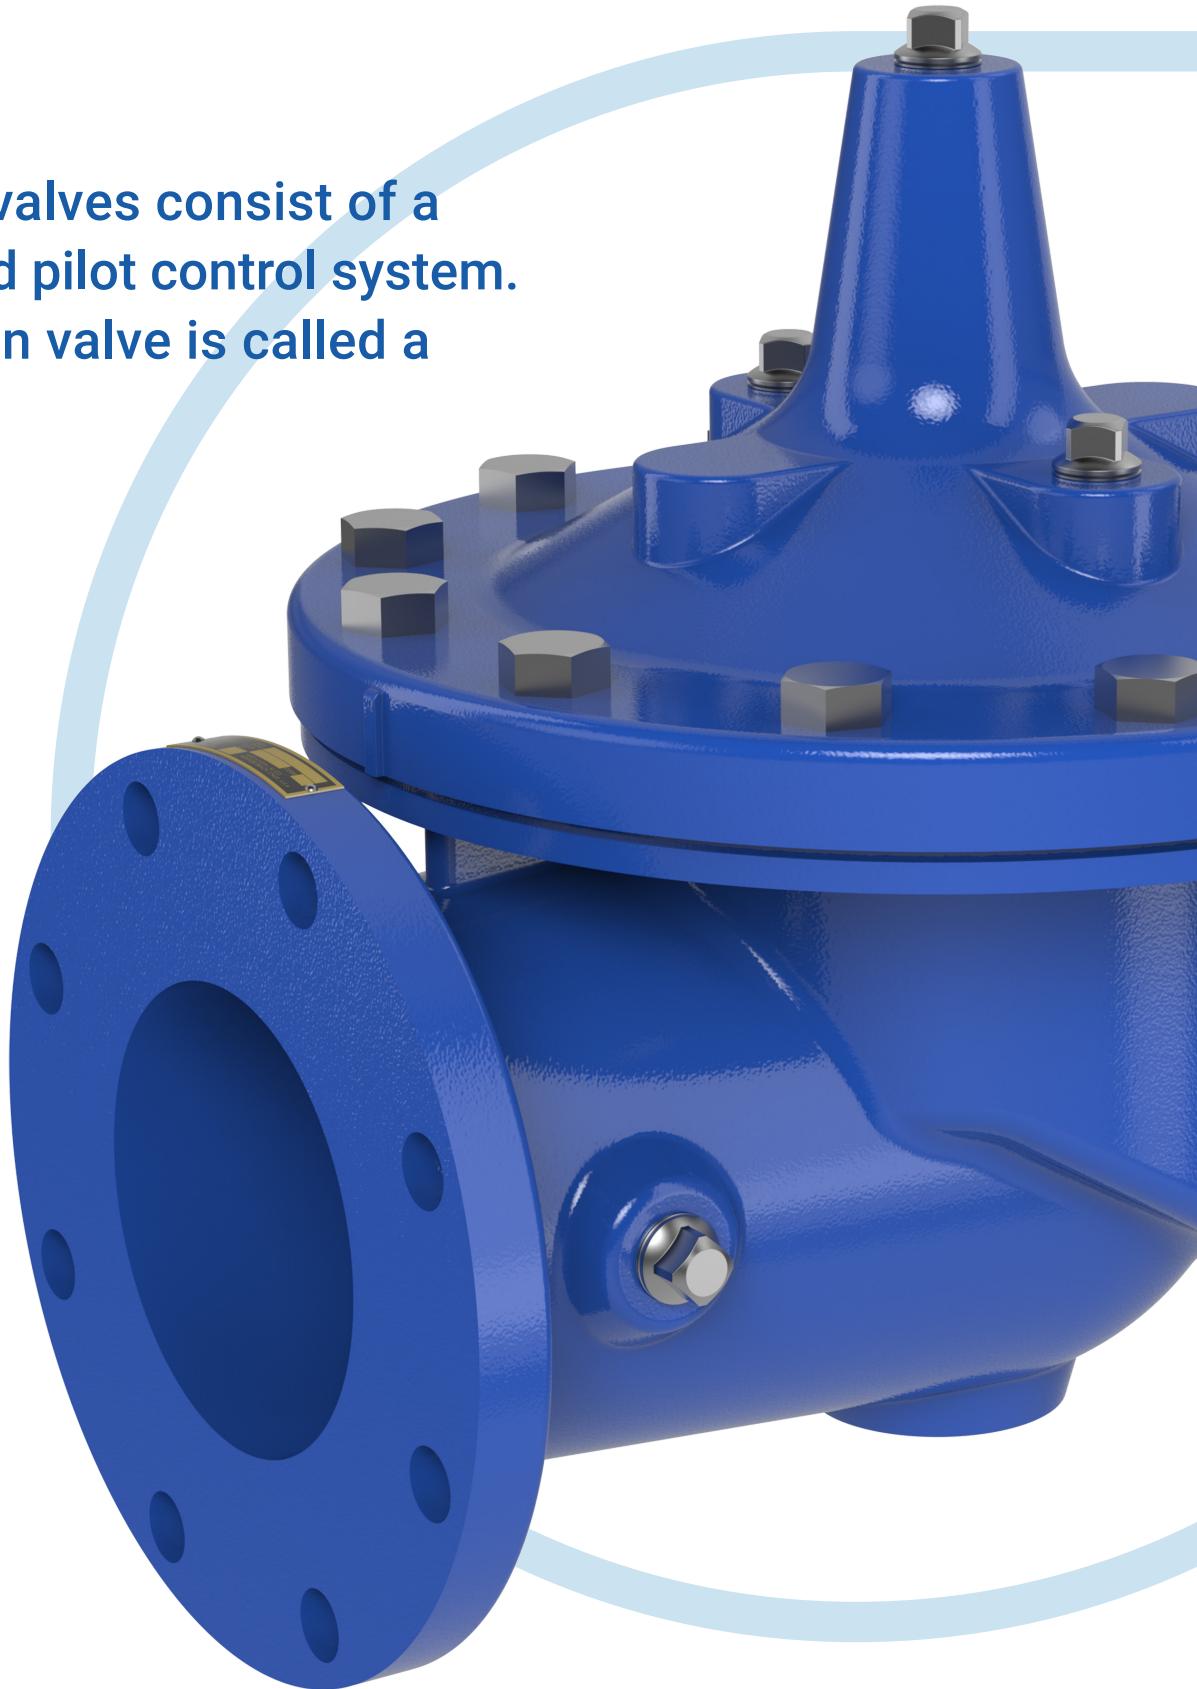


Main Valves

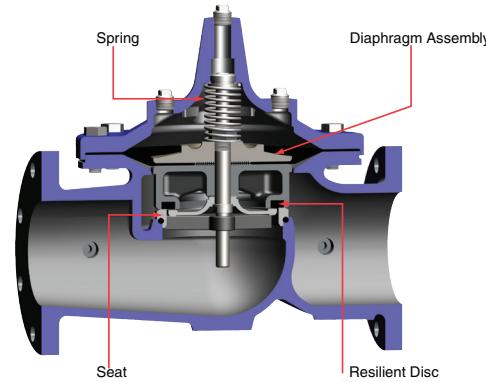

When no pressure is in the valve, the spring and the weight of the diaphragm assembly hold the valve closed.

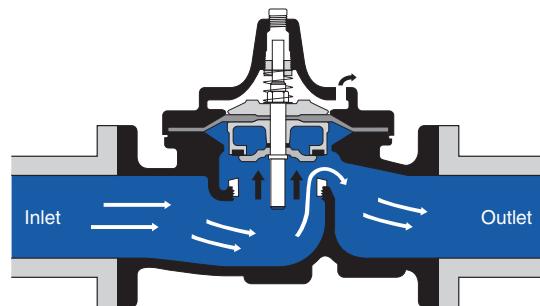

With the cover chamber vented to atmosphere, the valve will open from the line pressure under the disc.

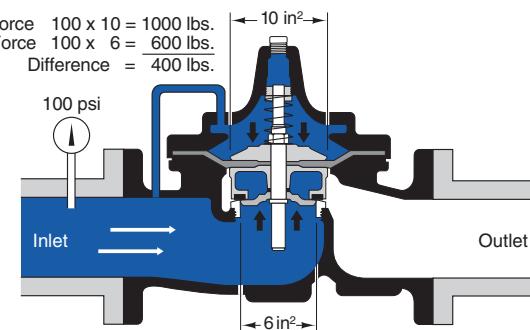


If inlet pressure is connected into the cover chamber, the valve closes tightly. In this example, the 400 pound difference is the force which pushes the disc against the seat and causes the valve to seal drip-tight.

Non-Modulating Controls


A simple control which either opens the valve wide or closes it tightly is a three-way valve.

The type of operation this control gives is called **non-modulating** because the valve cannot pause in a partially open position. Once the control is turned to either position, operating fluid flow into or out of the cover chamber until the valve is open or closed.

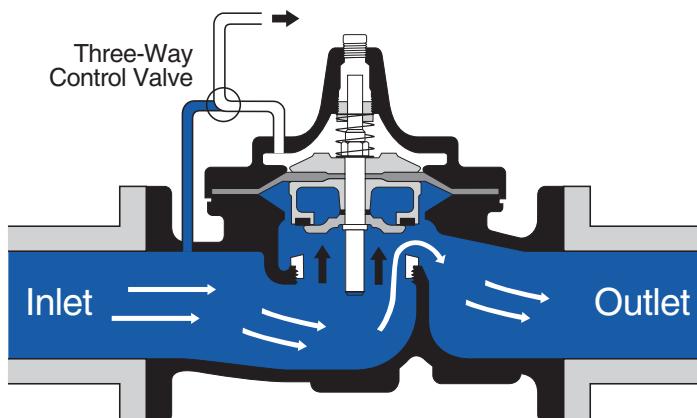

To open


Control is turned to exhaust cover chamber pressure.

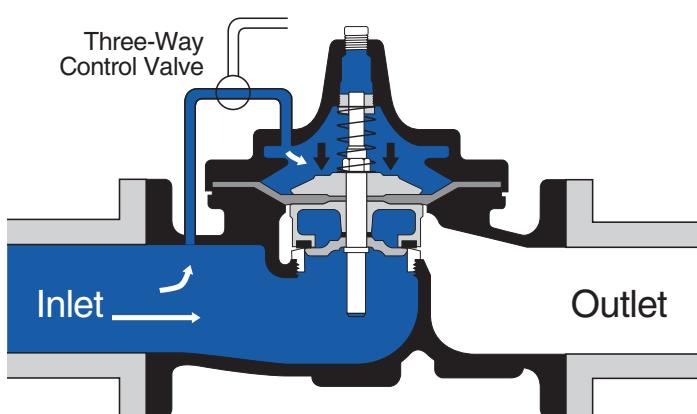


To close

Control is turned to apply pressure to cover chamber.

Non-Modulating Controls

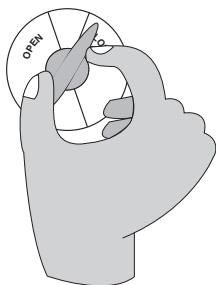


By Hand

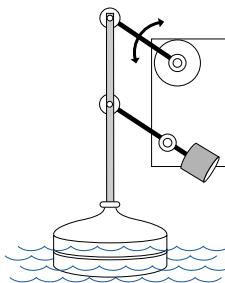


By A Float

Controls & Operations


Ordinary three-way valves usually are not satisfactory because they require so much force to operate. An easy-turning control which can be operated in a variety of ways is usually used. Several examples of controls and their operation are shown here.

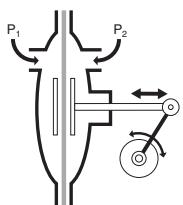

By A Difference in Two Pressures

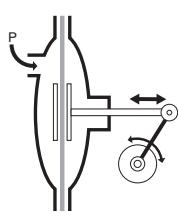


By Pressure

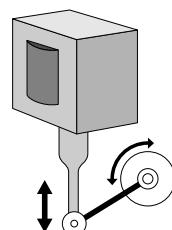

With A Solenoid


Modulating Controls

The Cla-Val Automatic Control Valve modulates if the cover pressure is held between the **inlet** and **outlet** pressure. To achieve modulating operation, a slightly different type of control system is utilized.

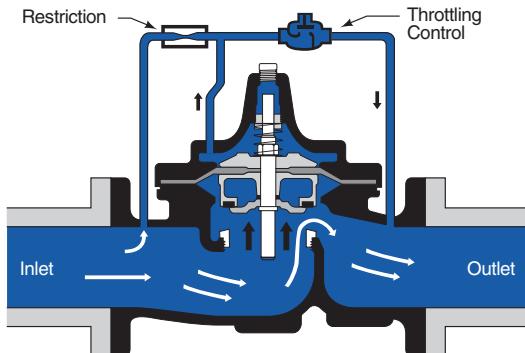


Valve Open

When the throttling control opens to a point where more pressure is relieved from the cover chamber than the restriction can supply, cover pressure is reduced and the valve opens.

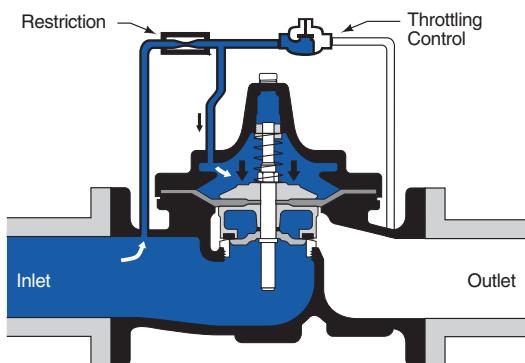

Valve Closed

When the modulating control closes sufficiently to direct a great enough pressure into the cover chamber to overcome opening forces of line pressure, the main valve closes.

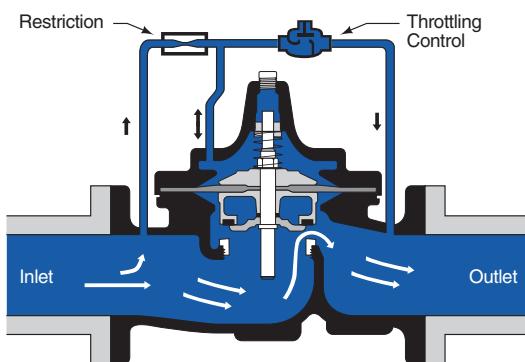


Valve Throttling

The main valve modulates to any degree of opening in response to changes in the throttling control. At an equilibrium point, the main valve opening and closing forces hold the valve in balance. This balance holds the valve partially open, but immediately responds and readjusts its position to compensate for any change in the controlled condition.


Automatic Controls

The following examples illustrate several different types of operation utilizing automatic controls.

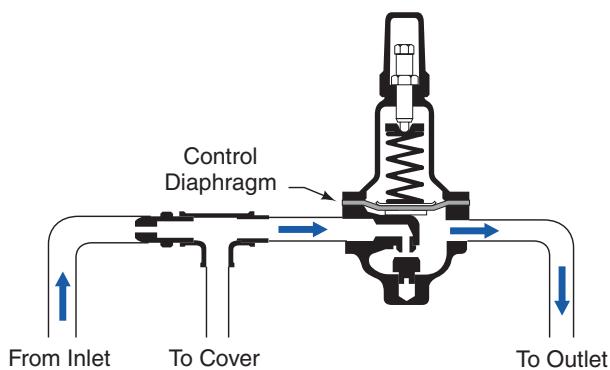


Pressure Reduction

Outlet pressure on control diaphragm causes the main valve to hold a steady outlet pressure.

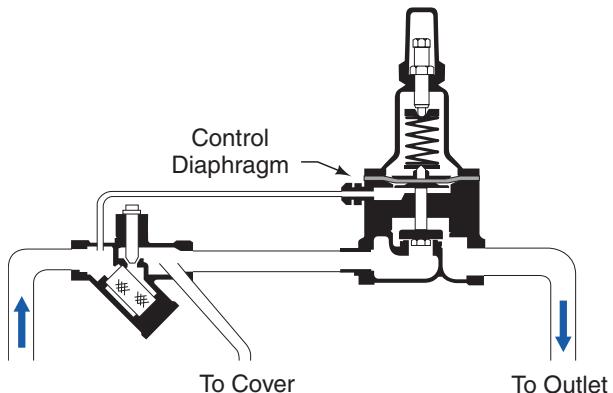


Pressure Relief

Inlet pressure on control diaphragm causes the main valve to hold a steady inlet pressure.

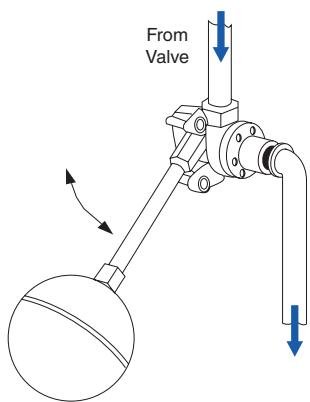

Liquid Level Controller

Slight changes in flow through the float control causes main valve to counteract changes in reservoir level so liquid level is held constant.

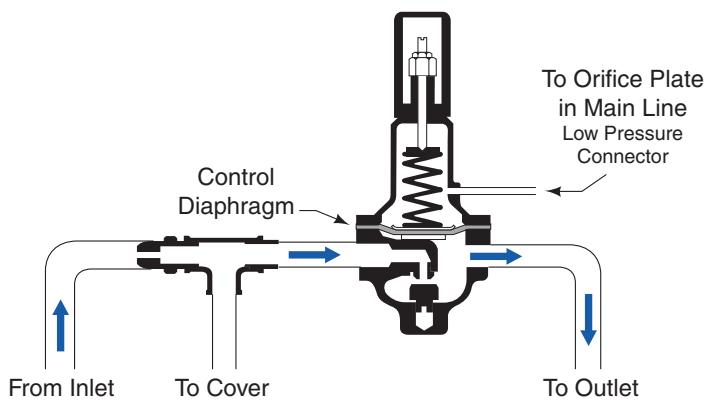


Rate of Flow Controller


Limits the maximum flow rate by changes to the main valve counteract any slight changes in differential pressure across an orifice plate located in the main line.

KO Anti-Cavitation Operation

KO Anti-Cavitation Internal Trim

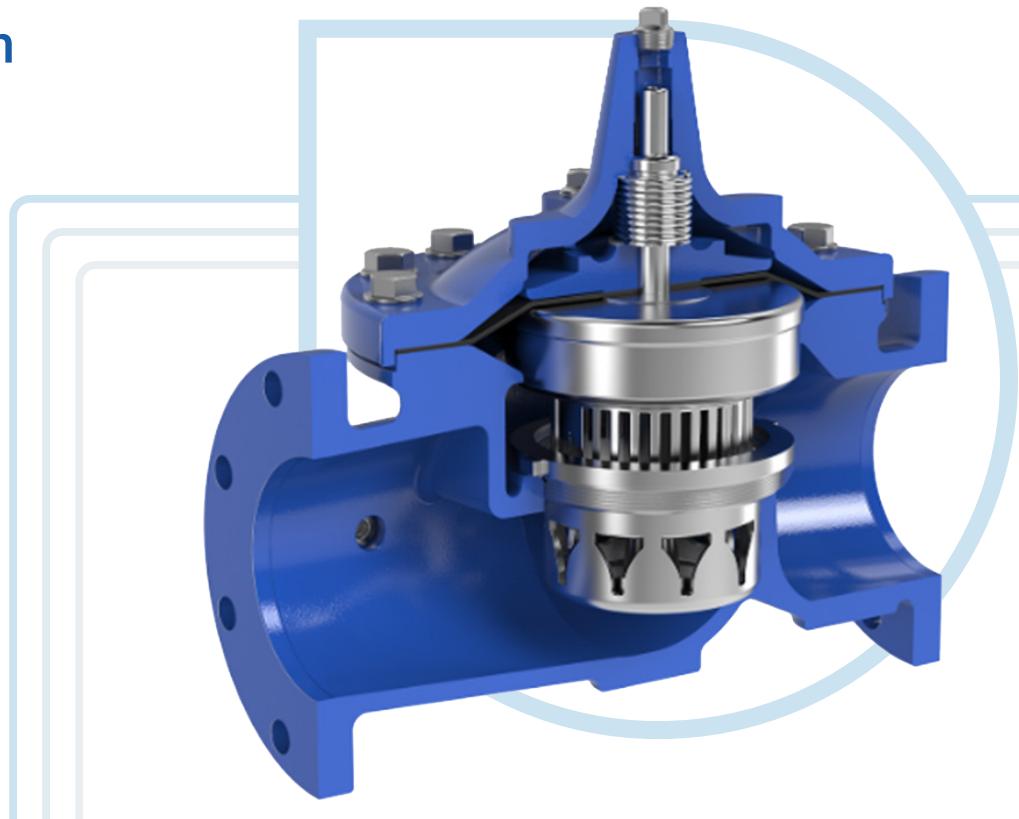

Three Stages of Pressure Reduction

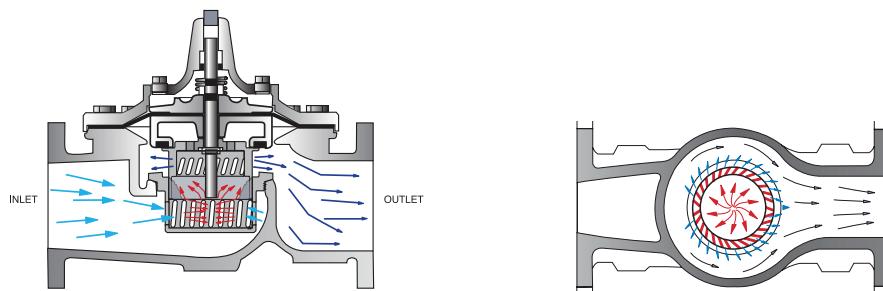

1

Flow enters through the seat.

2


Flow impinges upon itself within the seat and disc guide assembly to dissipate cavitation and further reduce pressure.

3

Flow exits through the disc guide for final pressure reduction. Diagonal disc guide slots direct flow away from surfaces.

Which way should fluid flow through a Cla-Val Valve?


Just as with any globe valve, the usual way is **under-the-disc** as shown. The main exception to the **under-the-disc** rule of thumb is the check valve.

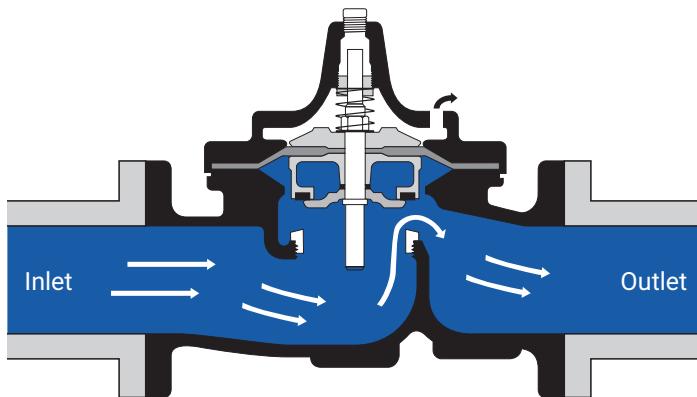

Under-The-Disc

Standard Flow

Normal so valve closes against the pressure

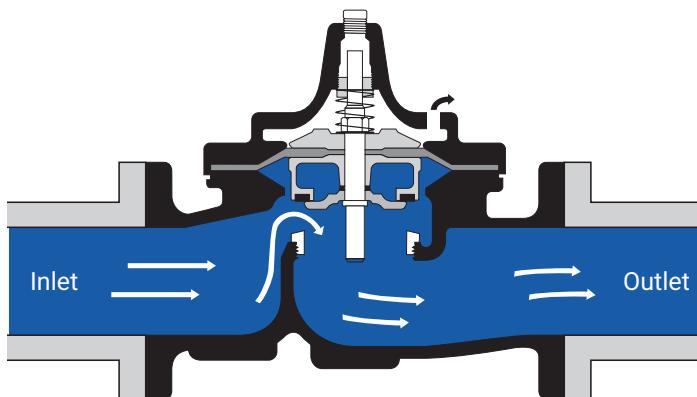

Over-The-Disc

Reverse Flow

Acceptable only under specific conditions

What purpose does the internal spring in the Hytrol valve serve?


To provide enough force to close the valve when no difference exists between inlet, cover and outlet pressures. When the inlet pressure is greater than outlet pressure (even by a small amount) the hydraulic forces, **not the spring**, hold the valve tightly closed.

Can pressure other than line pressure be used to operate Cla-Val Valves?

Yes. Frequently, when line fluid is too dirty or otherwise unsuitable, a separate source of pressure is desired. Clean water, air (with some limitations), or oil are suitable. The important point is to make sure the operating pressure is equal or greater than inlet pressure **at all times**.

Can the opening and closing speed of a Cla-Val Valve be controlled?

Yes. It is a matter of controlling the rate at which operating fluid flows into or out of the cover chamber. Here is a typical valve equipped with both opening and closing speed controls. A simple needle valve can be used for these controls.

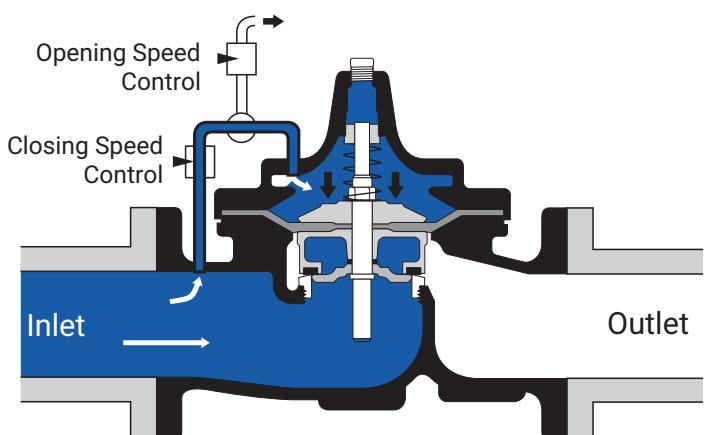

What should be done if line pressure is very low? (Below 10 psi)

Usually a separate source of operating pressure is required. A spring to open the valve may be necessary. Consult the factory for recommendations.

A dramatic, high-contrast photograph of molten metal. A bright stream of molten metal flows from a ladle on the right into a mold on the left. The molten metal is a intense, glowing yellow and white, contrasting sharply with the dark, smoky background. The mold is a dark, textured block. The overall atmosphere is industrial and powerful.

TRUSTED FOR
GENERATIONS
INNOVATING
FOR TOMORROW



Global Locations



Global Headquarters

1701 Placentia Avenue
Costa Mesa, CA 92627
949-722-4800
800-942-6326
info@cla-val.com
www.cla.val.com

Western USA
800-942-6326

Central USA
800-533-8181

Eastern USA
800-451-3030

Cla-Val Canada
905-563-4963
sales@cla-val.ca

Cla-Val Latin America

52-(33)-80007565
info@cla-val.com
www.cla-val-latinamerica.com

Cla-Val Europe
Chemin Des Mesanges 1
CH-1032 Romanel/Lausanne
Switzerland
41-21-643-15-55
cla-val@cla-val.ch

Cla-Val United Kingdom
44-1892-514-400
info@cla-val.co.uk

Cla-Val France
33-4-72-25-92-93
cla-val@cla-val.fr

Cla-Val Asia Pacific

+ 64-3-9644860
info@cla-valpacific.com
www.cla-valpacific.com

Cla-Val UAE
+ 971 4 5667665
cla-val@cla-val.ch

Cla-Val Singapore
+65 91798177
wktan@cla-val.com

Cla-Val China
info@cla-valpacific.com