


Booster Pump Control Valve



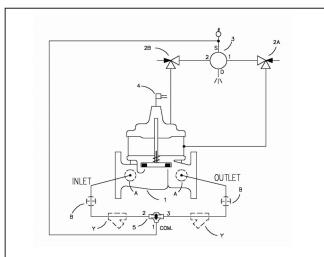

Schematic Diagram

Item Description

- 1 Powercheck Main Valve 100-30
- 2 CV Flow Control
- 3 CSM11-A2-2 Solenoid Control
- 4 X105LCW Switch Assembly
- 5 CVS-1 Shuttle Valve

Optional Features

Item Description

- A X46A Flow Clean Strainer
- B CK2 Isolation Valve
- Y X43 "Y" Strainer

- Simple Hydraulic Operation
- Low Head Loss
- Horizontal or Vertical Mounting
- Built-in Check Valve
- Proven Reliable Design

The Cla-Val Model 60-73 Booster Pump Control Valve is a pilotoperated valve designed for installation on the discharge of booster pumps to eliminate pipeline surges caused by the starting and stopping of the pump.

The pump starts against a closed valve. When the pump is started, the solenoid control is energized and the valve begins to open slowly, gradually increasing line pressure to full pumping head. When the pump is signaled to shut-off, the solenoid control is de-energized and the valve begins to close slowly, gradually reducing flow while the pump continues to run. When the valve is closed, a limit switch assembly, which serves as an electrical interlock between the valve and the pump, releases the pump starter and the pump stops.


Should a power failure occur, a built-in lift-type check valve closes the moment flow stops, preventing reverse flow regardless of solenoid or diaphragm assembly position.

Typical Installation

Install Model 60-73 valve as shown. Flexible conduit should be used for electrical connections to the solenoid control and the limit switch. The Model 52-02 or 652-03 Surge Anticipator Valve is recommended for power failure protection.

Note:

Valve stem can be located in either vertical up or horizontal position.

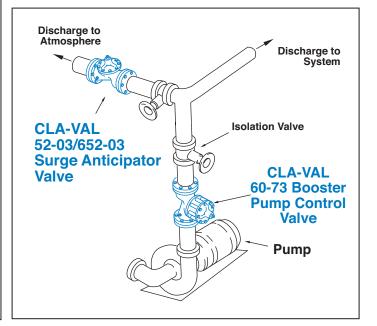


Pressure Ratings (Recommended Maximum Pressure - psi)

Valve Body &	Pressure Class						
Valve Body & Cover		Fla	Threaded				
Grade	Material	ANSI Standards*	150 Class	300 Class	End‡ Details		
ASTM A536	Ductile Iron	B16.42	250	400	400		
ASTM A216-WCB	Cast Steel	B16.5	285	400	400		
UNS 87850	Bronze	B16.24	225	400	400		

Note: * ANSI standards are for flange dimensions only. Flanged valves are available faced but not drilled. ‡ End Details machined to ANSI B2.1 specifications.

Valves for higher pressure are available; consult factory for details

Dimensional Data

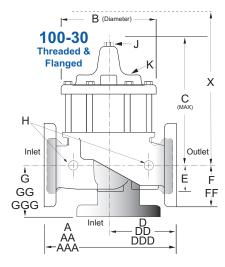


60-73 Series Dimensions (Full Internal Port 100-30) (mm)

Valve Size (mm)	65	80	100	150	200
A Threaded	279	318	_	_	
AA 150 ANSI	279	305	381	508	645
AAA 300 ANSI	295	337	397	533	670
B Diameter	203	232	292	400	508
C Maximum	262	284	362	468	554
D Threaded	140	159	—	—	—
DD 150 ANSI	140	152	191	254	322
DDD 300 ANSI	148	168	198	267	335
E	43	52	81	109	135
F 150 ANSI	89	95	114	140	171
FF 300 ANSI	95	105	127	159	191
G Threaded	102	114	—	—	_
GG 150 ANSI	102	102	127	152	203
GGG 300 ANSI	110	111	135	165	216
H NPT Body Tapping	0.50	0.50	0.75	0.75	1.00
J NPT Cover Center Plug	0.50	0.50	0.75	0.75	1.00
K NPT Cover Tapping	0.50	0.50	0.75	0.75	1.00
Stem Travel	18	20	28	43	58
Approx. Ship Weight (kgs)	30	43	86	145	295
Approx. X Pilot System	432	457	533	864	940
Approx. Y Pilot System	254	279	305	508	1067
Approx. Z Pilot System	254	279	305	508	1067

Materials

Component	Standard Material Combinations				
Body & Cover	Ductile Iron Cast Steel Bronze				
100-30 Sizes (mm)	65 - 200 mm	65 - 200 mm			
Disc Retainer & Diaphragm Washer	Cast Iron Cast Steel Bronz				
Trim: Disc Guide, Seat & Cover Bearing	Bronze is Standard Stainless Steel is Optional				
Disc	Buna-N [®] Rubber				
Diaphragm	Nylon Reinforced Buna-N [®] Rubber				
Stem, Nut & Spring	Stainless Steel				
For material options not listed, consult factory					

Cla-Val manufactures valves in more than 50 different alloys.

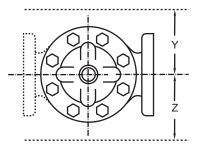

60-73	100-30 Pattern: Globe (G), Angle (A), End Connections: Threaded (T), Grooved (GR), Flanged (F) Indicate Available Sizes							
Valve Selection	millimeters (mm)	65	80	100	150	200		
Main Valve	Pattern	G, A						
100-30	End Detail	T, F	T, F	F	F	F		
Suggested	Maximum	300	460	800	1800	3100		
(~~~~)	Maximum Intermittent	370	580	990	2250	3900		
Suggested	Maximum	19	29	50	113	195		
Flow (Liters/Sec)	Maximum Intermittent	23	37	62	142	246		
(Litoro/Soo) 23 3/ 62 142 246								

CSM11 Solenoid Control Power Consumption

Volts	lts Amperes		Volts	Amperes		Coil
VOILS	Апр	eles	VOILS	Amperes		Resistance
DC	Holding	Pull In	AC 60 Hz	Holding	Inrush	Ohms
24	.603	24	24	2.88	25.4	0.5
28	.629	120	120	.575	5.1	14.1
32	.500	208	208	.330	2.93	40
48	.293	240	240	.288	2.54	58
115	.122	440	440	.156	1.38	174
125	.119	480	440	.143	1.27	233
252	.072	2.45				
			Volts	Amperes		Coil
			VOIIS	Лпр	6163	Resistance
		(AC 50 Hz)	Holding	Inrush	Ohms	
			110	.48	4.6	15.7
			220	.24	2.3	66
			240 .22 2.1		88	
-						

CSM11 Solenoid Control



How to Order

When Ordering, Please Specify:

- 1. Catalog No. 60-73
- 2. Valve Size
- 3. Pattern Globe or Angle
- 4. Pressure Class
- 5. Trim Material
- 6. Electrical Selection
- 7. Desired Options
- 8. When Vertically Installed
- 9. Epoxy Coating

CSM11 Specifications

Enclosure General purpose NEMA Type 3; Aluminum Note: For other enclosures and NEMA Types, consult factory

Housing	Body – Aluminum
riousing	,
	Trim – Stainless Steel

Operating Pressure: Maximum pressure 300 psi, for higher pressure consult factory. AC or DC

Coil Insulation	Class A (molded)			
AC voltage	15.4 watts			
DC voltage	16.8 watts			

Pilot System Specifications

Temperature Range

3
ber

Optional Pilot System Materials Pilot Systems are available with optional Aluminum, Stainless Steel or Monel materials.


Optional Electronic Control



The Cla-Val PC-22D provides control of the pump and pump control valve, preventing surges in the system when the pump starts or stops. It consists of a pre-wired electrical control panel employing a programmable valve controller to sequence the pump and pump control valve during all modes of operation. Provides added protection to the pumping system from damage caused by mechanical, hydraulic or power failure.


The PC-22D offers all the control features found in the recommended wiring diagrams for Cla-Val pump control valves, plus alarms, automatic shutdown and adjustable timers.

Sequence Of Operation

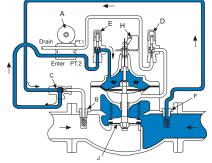


Pump Off...

With pump off, static line pressure is transmitted through strainer "F", shuttle valve "C", solenoid control "A", and speed control "E" to the chamber above the diaphragm, thus holding the valve closed. If power failure occurs when valve is open, the built-in check valve "J" closes immediately to prevent reverse flow.

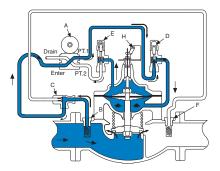

Starting Cycle...

Starting switch closes, pump starts, solenoid control "A" energizes and shifts allowing fluid from upper diaphragm chamber to drain to atmosphere. High pressure fluid from pump enters strainer "B" and shifts shuttle valve "C", which always supplies the highest pressure from either strainer "B" or "F". High pressure fluid is transmitted to the lower diaphragm chamber and opens the valve. The opening speed of the valve is controlled by speed control "E", which limits the rate fluid is relieved from above the diaphragm.

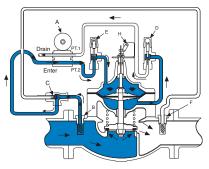


Stopping Cycle...

Starting switch opens, solenoid control "A" deenergizes and shifts, pump continues to run. High Pressure fluid from the pump is directed above the diaphragm, applying force to close the valve.

The valve closes slowly as fluid from the lower diaphragm chamber is gradually released to atmosphere through speed control "D" and solenoid "A". When the valve closes fully, the limit switch "H" shuts off the pump.



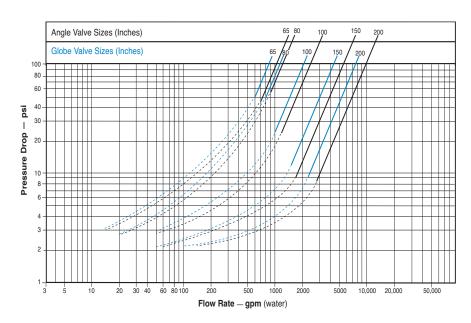

Liquid Volume Displaced from Diaphragm Chamber When Valve Opens or Closes						
Sizes (mm) 65 80 100 150 2						
60-73	.163 liters	.303 liters	.640 liters	2.01 liters	4.77 liters	

Valve Sizing

Sizing Model 60-73 Booster Pump Control Valves is similar to sizing non-modulating type valves. Simply select the smallest size valve that will handle the pump output at an acceptable head loss for the application.

Do not oversize. Oversizing a Booster Pump Control Valve will nullify its ability to prevent surges caused by the starting and/or stopping of the pump. Maximum flow values are given in the selection table above. For further information on flow characteristics for this valve, reference the 100-30 (60-73) technical data sheet.

Example:

A booster pump station with a rated output of 1000 GPM and 4 psi is an acceptable head loss for the application.

Drain Provisions

Each time the valve opens or closes, water is discharged from the solenoid exhaust port, the amount varying with the valve size. Provisions should be made for the disposal of this water. Exhaust tube must be free of any back pressure. Provide an air gap between the solenoid exhaust tube and drain facility.

CLA-VAL